



- 1** Remove bonnet nut (1) and cartridge assembly (2). Discard bonnet nut. If cartridge has clip not spring, perform Step 2.
- 2** **A.** Remove retainer (1) from cartridge assembly (2).
B. Remove contact plate (3) from cartridge assembly.
- 3** Replace cartridge (1) using new bonnet nut (2) and tighten with wrench.
- 4** **A.** Using a small amount of pressure, squeeze spring as shown and insert into undercut area (1) of new bonnet nut.
B. Push top of spring over cartridge stem as shown.
C. Replace cap and handle, then test for proper operation.