NAMEEK'S
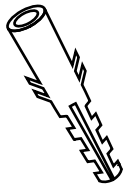
Installation Instructions
Wall Mounted Towel Bar

Following these mounting instructions with the hardware included will be more than sufficient to support wall mounted installation.
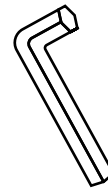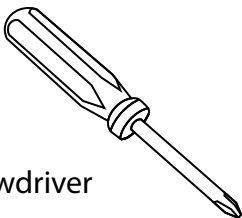
Included Installation Hardware
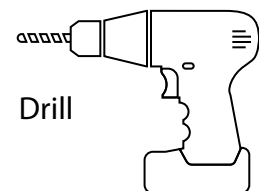
x4   screw

x4   wall anchor

x1   allen wrench

Tools You May Need

Level

Drill

Screwdriver
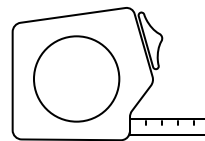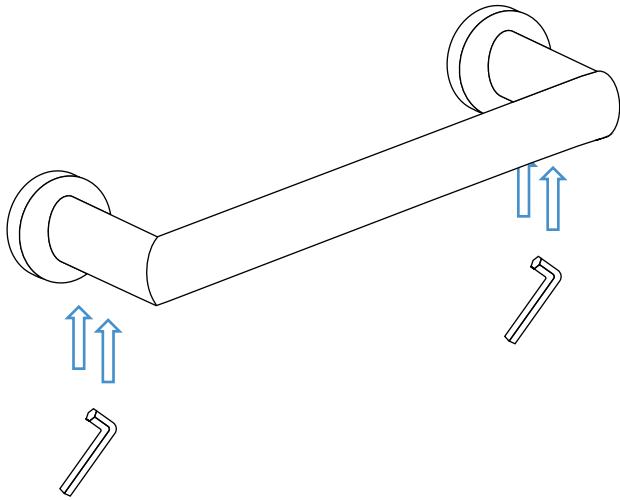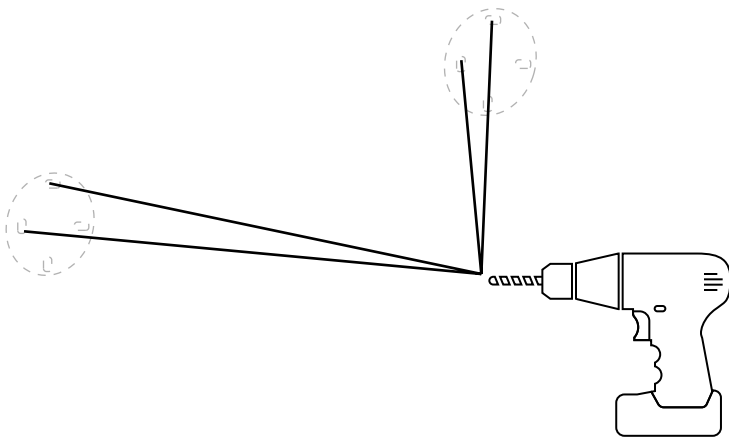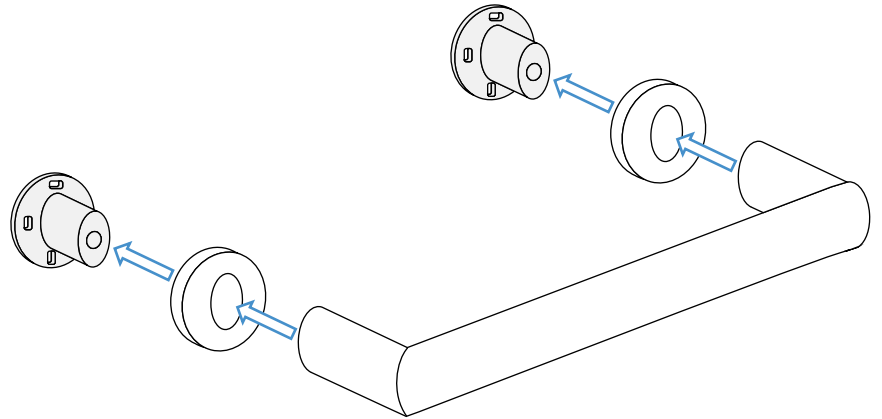
Tape Measure

1. Disassemble

Put the included allen wrench into the four screws on the bottom of the right and left side of body and turn clockwise to disassemble the base from the mounting piece.

2. Remove Bracket

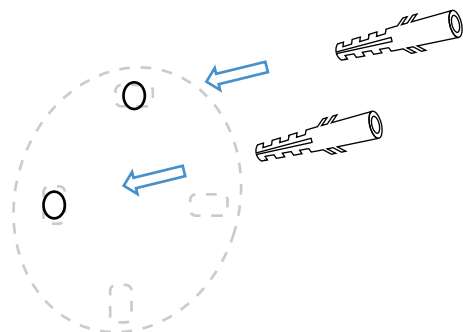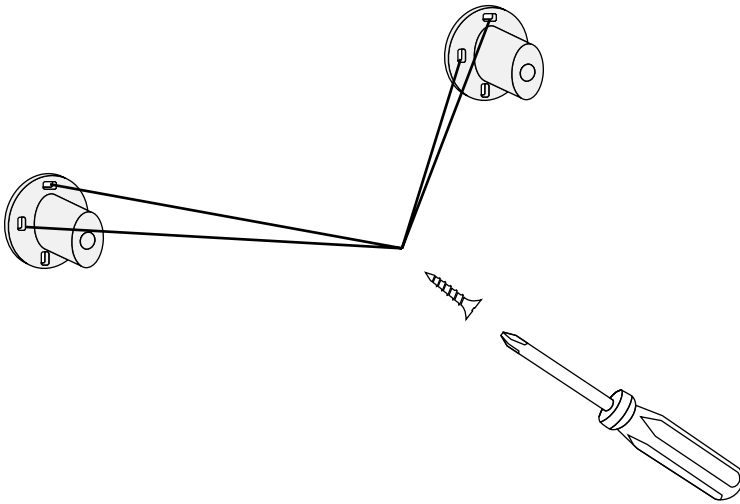Pull mounting bracket from both sides of towel bar.

3. Drill Anchor Holes

Identify installation location. Mark mounting brackets on wall and drill holes the size of the anchors.

4. Install Anchors
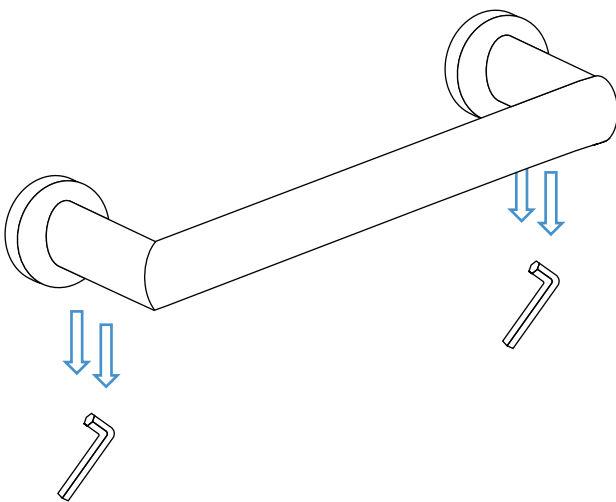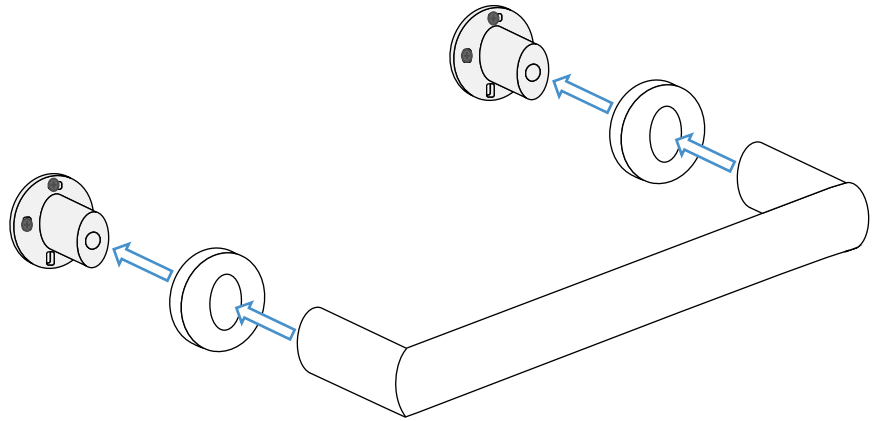
Tap anchors into predrilled holes.

5. Mount Brackets

Mount brackets with screws.

6. Mount Towel Bar

Install towel bar over mounting bracket.

7. Tighten Screws

Tighten four (4) screws with allen wrench included by turning counterclockwise.